


cocoweb™
Living

USER MANUAL

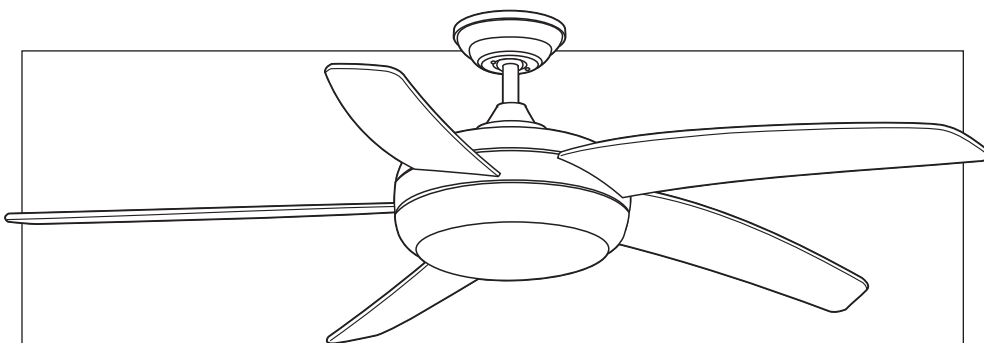

FR FRISCO
CR CROATAN
CH CHESAPEAKE

AC Motor Ceiling Fans

IMPORTANT SAFEGUARDS

CAREFULLY READ THESE INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING INSTALLATION. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

SAFETY

- Installation of fans and electrical work may present a possible shock or fire hazard if improperly installed or used. All electrical work should be performed in accordance with all federal, state and local safety regulations and require proper grounding. All work should be performed by a certified electrician. Before starting installation, turn OFF electricity at the main fuse or circuit breaker that controls the power to the fixture/room you are working on.
- Means for disconnection must be incorporated in the fixed wiring in accordance with wiring rules. Fans and light MUST be grounded. Bracket MUST be firmly attached to a solid structure and MUST be nailed between beams if timber option is required.
- All set screws must be checked and retightened where necessary before installation.

WARNING

- Only approved COCOWEB speed controllers should be used for the operation of COCOWEB fans. The use of unauthorized controllers will void the warranty.
- DO NOT mix blades from one fan to another. All blades MUST be replaced if damaged.
- To reduce the risk of personal injury, do not bend the blade brackets when installing the brackets, do not balance the blades, and do not clean the fan while it is in motion. Do not insert foreign objects in between rotating fan blades.

Important: Always operate the product from a power source of the same Voltage, Frequency and rating as on the product Identification Plate.

Important: The fan is to be installed so that the blades are more than 10 feet (3.05M) above the floor.

Fan blade assembly can also be done on the floor prior to installing on the ceiling. This can be done by placing fan on the foam insert provided in the fan carton.

Important: Be careful not to bend the blades when installing.

Avoid contacting moving parts. Keep hands, hair, and clothing well away from the product while it is in operation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Young children should be supervised to ensure that they do not play with the appliance.

Do not operate any product which has been/or appears damaged in any manner or after the product malfunctions.

CAUTION: To reduce the risk of electric shock, do not install the product where it can be exposed to rain, moisture or any liquid.

Do not operate this product in the presence of explosive fumes and/or flammable liquid.


Do not use this product for anything other than its intended use as described in these instructions. This product is intended for normal domestic household use only. The use of accessory attachments other than those recommended by the manufacturer may cause safety hazards.

CAUTION: To Reduce The Risk Of Electric Shock, Disconnect The Electrical Supply Circuit To The Fan Before Installing Light Kit.

Ceiling-suspended fan assembly

ASSEMBLY DRAWING

- A. Fan Motor Assembly
- B. Canopy
- C. Fan Blade
- C-1. Fan Blade
- D. Mounting Bracket
- E. Downrod Assembly
- F. Glass Bowl
- G. Downrod Cover
- H. Remote Control
- I. Balancing Kit

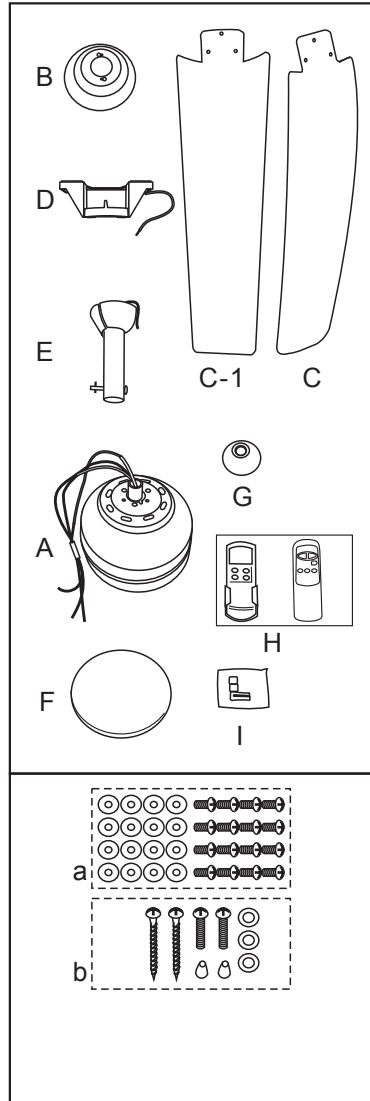


- a. Blade' Screw
- b. Mounting Bracket' Screw

WARNING:
DO NOT INSTALL OR USE FAN IF ANY
PART IS DAMAGED OR MISSING.

Ceiling-suspended fan installation method

HOW TO ASSEMBLE

1. Secure the hanger bracket to ceiling beam or a suitable piece of timber inserted between the ceiling beams. Cocoweb recommends the bracket be attached with two (2) long screws as supplied within the package. (See fig 1)

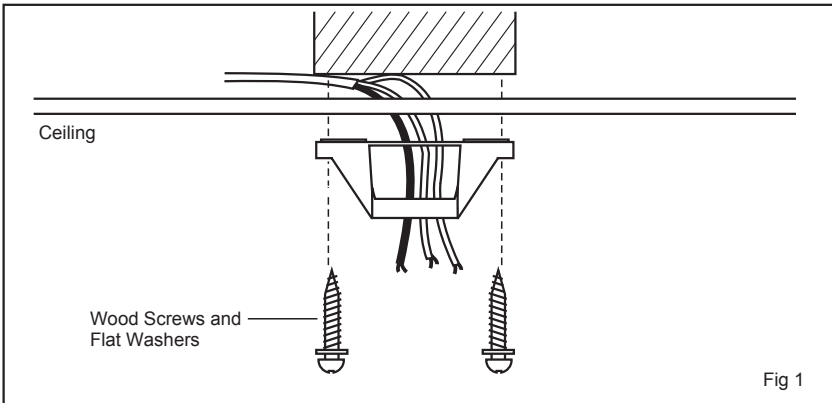

NOTE: Cocoweb assumes that installation of this ceiling fan is carried out as per the instruction manual (i.e. mounted to a solid timber structure). It is the purchasers responsibility to ensure that the installing electrician has carried out the installation of this ceiling fan as per the instruction manual. Should any noise emanate from this ceiling fan, it is the purchasers responsibility to have their electrician check the installation of the fan. Steel beams, grid ceiling and flexible surfaces will not absorb vibration and may cause some audible noise due to vibration. **THIS IS NOT A FAULT AND IS NOT COVERED UNDER WARRANTY.**

3. Withdraw six (6) screws from the upper housing and remove the upper housing from the fan assembly. Assemble the blades (one at a time) to the fan mounting disc, making sure the blades are correctly oriented. Fasten each blade with three (3) screws and fibre washers as supplied and tighten. (See fig 2-1, fig 2-2)

Warning: Do not mix blade sets from one fan to another. If only one blade is damaged you are still required to replace with a complete new set. Do not over tighten the blades screws as this may cause creaking noises which are not covered by warranty.

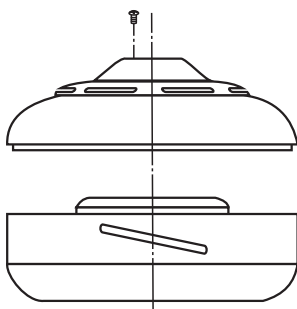


Fig 2-1

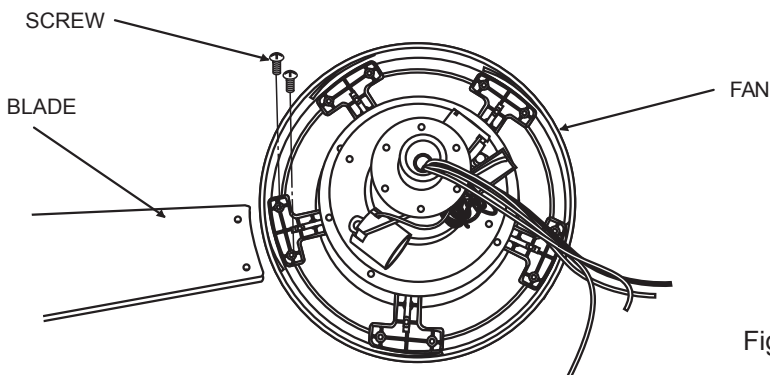


Fig 2-2

Replace upper housing making sure the reverse switch marking lines up with the reverse switch and refasten with the six (6) screws and washers previously withdrawn.

4. Remove the ball joint fitting and the retaining pin and clip from the down rod and attach to the fan body (feed all the cables through the down rod). Place the retaining pin through the fan body assembly, insert the clip and tighten the two securing screws.
5. Place the ceiling canopy over the down rod and reattach the ball joint fitting to the down rod.
6. Place fan into hanger bracket and align ball joint slot with hanger bracket. Connect all cables to the terminal block attached to the hanging bracket.
7. After wiring is completed, attach the canopy to the hanger bracket by pushing upwards and twisting anti-clockwise. Locate screws in keyholes and tighten. (See fig 3-1 ~ fig3-5)

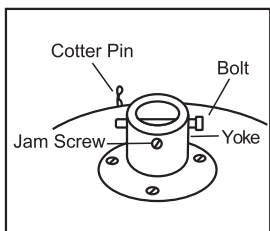


Fig 3-1

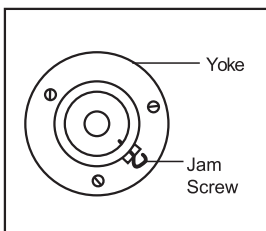


Fig 3-2

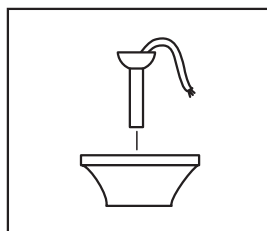


Fig 3-3

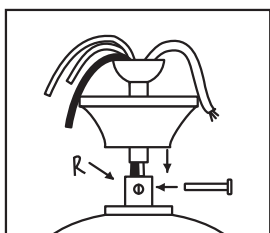


Fig 3-4

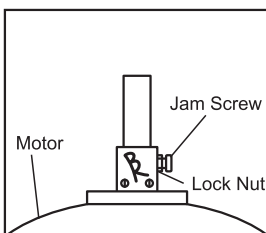



Fig 3-5

Lighting kit installation guide

REMOVING AND REPLACING THE LIGHT BULBS/SHADE

Carefully twist light shade counter-clockwise and lower to remove, to refit, place light shade in fitting and twist clockwise. Do not over tighten.

Fit only 13 Watt (maximum) ES (E26) x 2 Bulbs (SBCFL Type).

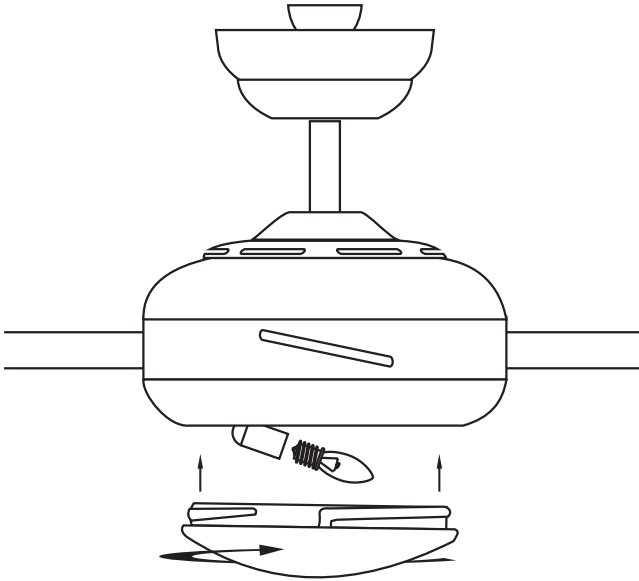

USE IN ALL SEASONS

Always ensure the fan is set to 'OFF' and the blades have stopped rotating prior to changing the direction of the blades.

The reverse switch on the fan should be set on 'SUMMER' (Forward) during warmer seasons to move the blades in an counter-clockwise direction, and

'WINTER' (Reverse) during cooler seasons to move the blades in a clockwise direction. (See fig 4)


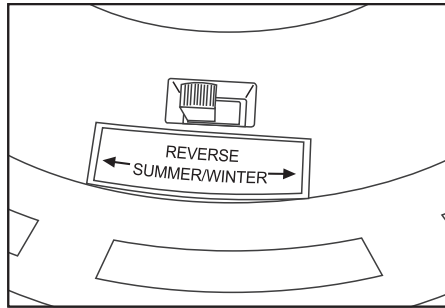


Fig 4

WIRING DETAILS

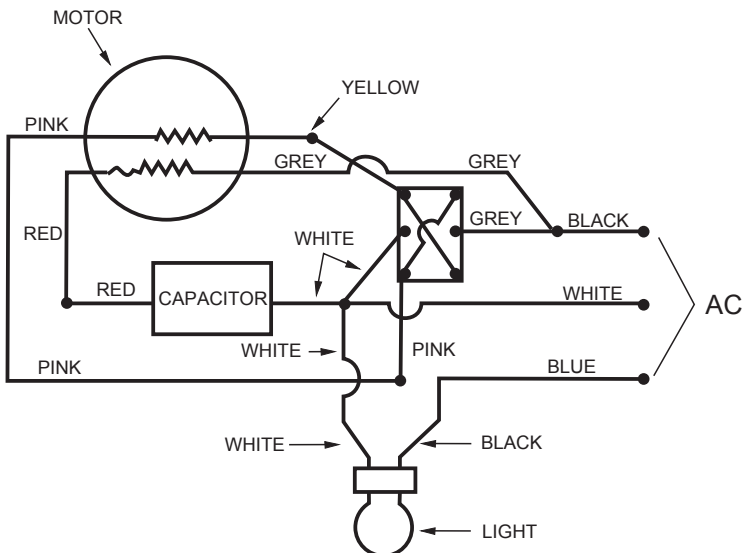


REMOTE CONTROL

(OPTION)



This fan is equipped with a canopy type remote control unit for controlling the fan speeds and light kit, please refer to the instruction sheet packed with the control unit for more information about the wiring and installation.

SUPPLY CIRCUIT

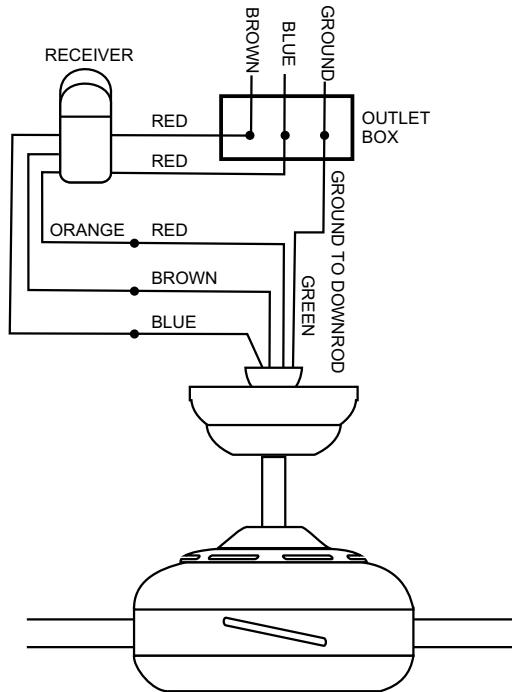

NOTE: Once ground wires are connected, carefully tuck wires and marrette into the top canopy making sure that the wires are clear of the ball joint and down rod when positioned in the mounting bracket.

WALL CONTROL (OPTION)

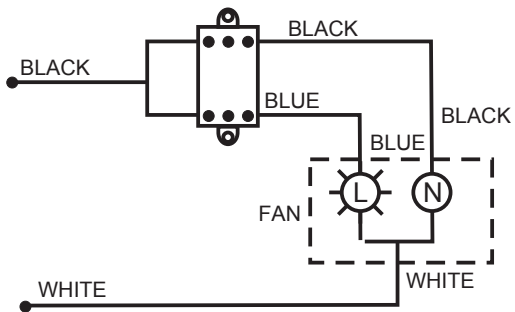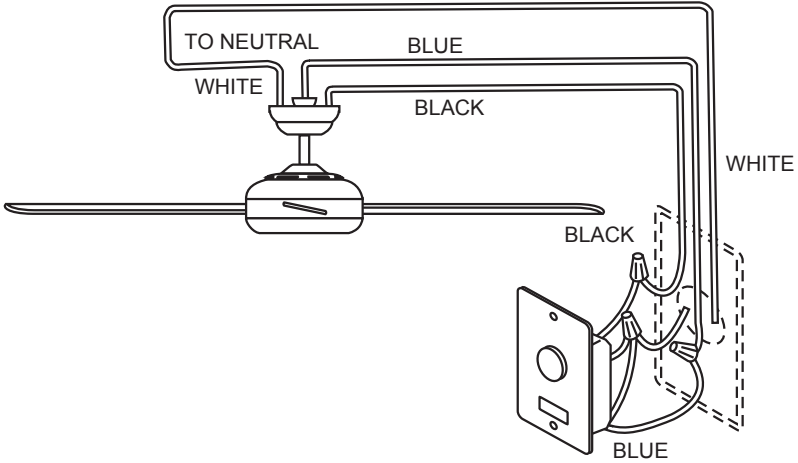


REMOTE CONTROL

(OPTION)



This fan is equipped with a canopy type remote control unit for controlling the fan speeds and light kit, please refer to the instruction sheet packed with the control unit for more information about the wiring and installation.

SUPPLY CIRCUIT

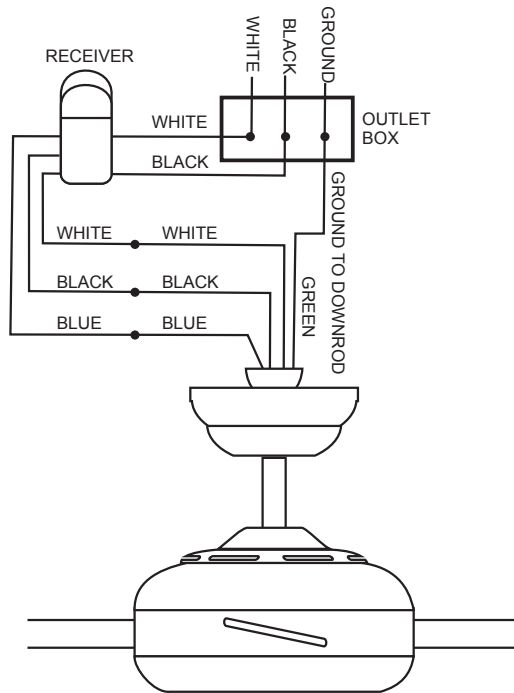

NOTE: Once ground wires are connected, carefully tuck wires and marrette into the top canopy making sure that the wires are clear of the ball joint and down rod when positioned in the mounting bracket.

WALL CONTROL (OPTION)

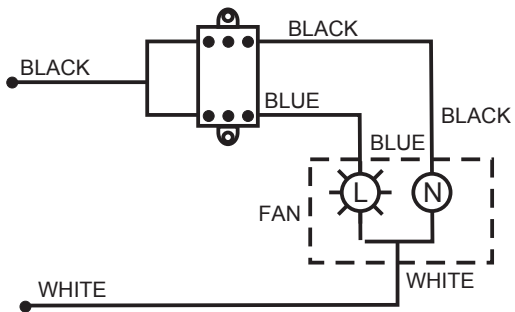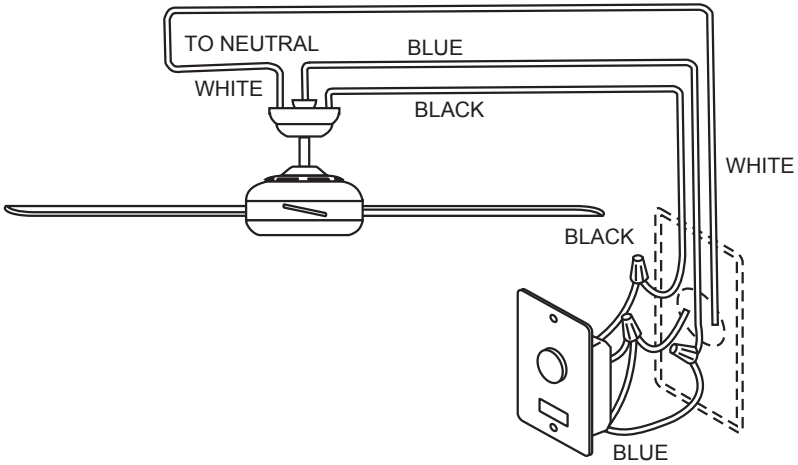

Cocoweb Two Year Limited Warranty

WARRANTY STATEMENT:

COCOWEB.COM, INC warrants this product for a period of TWO YEARS LIMITED WARRANTY FROM THE ORIGINAL DATE OF PURCHASE for residential situations, subject to the following conditions:

IMPORTANT NOTICE: COCOWEB.COM, INC WARRANTS THIS PRODUCT FOR TWO YEARS LIMITED WARRANTY (PARTS INCLUDED), COCOWEB.COM, INC ONLY WARRANTS THE FAN AGAINST FAULTY WORKMANSHIP AND SUBJECT TO THE CONDITIONS AND PROVISIONS SET OUT BELOW.

- 1) This Warranty is voided if your fan is not installed in the United States. Warranty does not transfer from the original purchaser. All ceiling fans replaced under warranty are only warranted for the balance of the warranty period.
- 2) The TWO YEAR warranty does not extend to fan accessories such as remote kits AND light fittings (INCLUDING GLASS LIGHT SHADES) that have been fitted during or after the original ceiling fan installation. All wall controllers, ballasts, light fittings and remote controllers included in the original carton ONLY carry a ONE YEAR warranty period. Remote control, wall control and light kits must be COCOWEB.COM, INC approved and branded units, any other branded unit will VOID the warranty. Globes are only covered under warranty within one year of the date of purchase only if it is due to a defect in material or workmanship. Any changes to plated and/or painted finishes due to climatic conditions or other circumstances deemed to be beyond the control of COCOWEB.COM, INC or their authorized agent are NOT covered under this warranty. Threaded components such as blade nuts and screws can work slightly loose during normal operation. These should be tightened regularly to ensure the fan does not develop operational noise. If noise does develop, check this aspect before requesting service. **THIS IS NOT COVERED UNDER WARRANTY.**

PLEASE NOTE: ALL CEILING FANS WILL MAKE SOME AUDIBLE NOISE, THIS WILL BE MOST EVIDENT AT NIGHT AND ESPECIALLY ON LOW SPEED SETTINGS, SLIGHT ELECTRICAL FLUCTUATIONS WILL CAUSE THIS, IT IS “NOT” COVERED UNDER WARRANTY. ALL SIGNALS SENT THROUGH BY THE ELECTRICAL SUPPLIER FOR OFF PEAK HOT WATER AND OTHER SIGNALS (RIPPLE CONTROL SIGNALS), FOR EXAMPLE STREET LIGHTING, MAY CAUSE INTERMITTANT HUMMING NOISES IN THE CEILING FAN, THIS IS NOT COVERED UNDER WARRANTY. A LIGHT FITTING WILL OFTEN ACCENTUATE NOISES AND VIBRATIONS AND CAN BE TRACED TO LOOSE GLASS FITTINGS OR OTHER COMPONENTS, THIS IS NOT COVERED UNDER WARRANTY.

This warranty does not apply: (a) to cosmetic damage, including but not limited to scratches and dents; (b) to damage caused by use with another product; (c) to damage caused by accident, abuse, misuse, liquid contact, fire, earthquake or other external cause; (d) to damage caused by operating the COCOWEB.COM, INC product outside COCOWEB.COM INC’s published guidelines; (e) to damage by service or modifications performed by anyone who is not an authorized representative of COCOWEB.COM, INC; (f) to defects caused by normal wear and tear or otherwise due to the normal aging of the COCOWEB.COM, INC product.

PLEASE NOTE: COCOWEB.COM, INC assumes that installation of this ceiling fan is carried out as per the instruction manual (ie. mounted to a solid timber structure). All installation, re-installation and de-installation costs of the fan are the sole responsibility of the original user or purchaser. It is the purchasers responsibility to ensure that the installing electrician has carried out the installation of this ceiling fan as per the instruction manual. Should any noise emanate from this ceiling fan, it is the purchasers responsibility to have their electrician check the installation of the fan. Steel beams, grid ceilings and flexible surfaces will not absorb vibration and may cause some audible noise due to vibration. **THIS IS NOT A FAULT AND IS NOT COVERED UNDER WARRANTY.**

COCOWEB.COM, INC covers manufacturing faults associated with the fan per the above warranty provisions. The warranty will not cover the entry of foreign matter or influences to the product including but not limited to liquid, moisture, dirt, dust or electrical fluctuations. Power supply faults or influences resulting in damage to this product are not covered under this warranty. The warranty does not cover any loss, damage or delay directly or indirectly caused by any malfunction of or defect of or failure of the product other than stated in this warranty.

PLEASE NOTE: STAINLESS STEEL REQUIRES REGULAR CLEANING, "TEA STAINING" IS A COMMON OCCURRENCE WITH ALL TYPES OF STAINLESS STEEL, THIS IS NOT A FAULT OF THE PRODUCT AND IS "NOT COVERED UNDER WARRANTY".

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IN RESPECT TO ANY COCOWEB.COM, INC FAN MOTOR OR OTHER FAN PART, IS EXPRESSLY LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE FOR SUCH MOTORS AND OTHER PARTS.

IMPORTANT NOTICE:

A COMPLETED WARRANTY CARD MUST HAVE BEEN SUBMITTED TO CLAIM A WARRANTY, THE WARRANTY CARD IS INCLUDED WITH THIS PRODUCT. COCOWEB.COM, INC MAY ALSO REQUIRE OR REQUEST THE CUSTOMER TO INCLUDE THE PURCHASE RECEIPT, ELECTRICIAN'S INSTALLATION COMPLIANCE CERTIFICATE, RECEIPT AND LICENSE NUMBER, THE PURCHASER'S FULL NAME AND DETAILS, THE FULL NATURE OF THE FAULT AND THE SERIAL OR P.O. NUMBER.

If during the warranty period, you submit a valid claim to COCOWEB.COM, INC, COCOWEB.COM, INC will, at its option, (i) repair the COCOWEB.COM, INC product using new or previously used parts that are equivalent to new in performance and reliability, (ii) replace the COCOWEB.COM, INC product with a product that is at least functionally equivalent to the COCOWEB.COM, INC product and is formed from new and/or previously used parts that are equivalent to new in performance and reliability, or (iii) exchange the COCOWEB.COM, INC product for a refund of your purchase price.

If the product is not functioning properly, please contact a COCOWEB.COM, INC representative. A COCOWEB.COM, INC representative will help determine whether your product requires service and, if it does, will inform you how COCOWEB.COM, INC will provide it.

If COCOWEB.COM, INC determines that your product is eligible for warranty service, you may send your product to the authorized location for servicing. COCOWEB.COM, INC does not pay for de-installation, re-installation or shipping costs to our locations. Once service is complete, COCOWEB.COM, INC will return the product to you.

In the instance, COCOWEB.COM, INC determines that the warranty service can be accomplished without the return of the lamp, such as replacing a part, COCOWEB.COM, INC will ship you a replacement product or part accompanied by instructions on installation, if applicable, and any requirements for the disposal of the replaced product or part.

COCOWEB.COM, INC reserves the right to change the methods by which COCOWEB.COM, INC may provide warranty service to you, and your product's eligibility to receive a particular method. Service options, parts availability and response times may vary. You may be responsible for shipping and handling charges.

CUSTOMER SERVICE (PHONE): 888-783-0378

CUSTOMER SERVICE (FAX): 949-535-1229

IMPORTANT: PLEASE DO NOT PHONE THE RETAILER FOR WARRANTY WORK, INSTEAD CALL THE CUSTOMER SERVICE PHONE NUMBER AT 888-783-0378 OR FAX AT 949-535-1229.

COCOWEB.COM, INC. 42 CORPORATE PARK SUITE 250, IRVINE, CA 92606

Warranty Registration Card

To register for your 2 year warranty, complete this warranty card and return it within thirty days of purchase to:

Cocoweb.com, Inc.
42 Corporate Park, Suite 250
Irvine, CA 92606

(or)

Email: customerservice@cocoweb.com

(or)

Fax: 949-535-1229

This warranty is a replacement warranty only and does not apply to products that have suffered physical abuse, been dropped, neglected, misused, normal wear and tear or improper use.

Please print or type legibly

Name	
Address	
City, State, Zip code	
Phone number	
Email address	
Product description	
Product model number	
Where was it purchased?	
Order or receipt number	
Date of purchase	