 


# 19-inch LED Adjustable Upright Console Piano Lamp (PLED100A)

## USER MANUAL

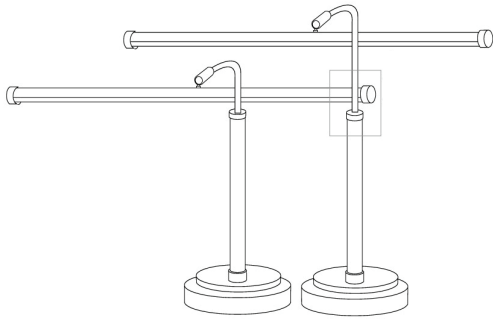

### Specifications:

- One-point adjustable height
- 19" swivelable shade with natural light LED array pre-installed
- The lamp shade contains 12 evenly spaced LED nodes
- Toggle on/off switch located on the lamp shade
- LED lifespan: 50,000 hours
- Color Temperature: 3000 K
- Power Usage: Less than 10 watts
- Electrical cord: 9.5 feet long
- UV and infrared-free LED technology
- Universal 24v 0.5A DC power adapter

### Contents:

- 19-inch LED Upright Console Piano Lamp
- 24V 0.5A DC Power Adapter

### Caution:

Any attempts to repair or modify this lamp in any way which are not expressly approved in writing by Conoco Web will void any warranties.

### Before Use:

Before using this lamp for the first time, read these instructions thoroughly and store them in a safe place for future reference.

### Important Safety Instructions:

- Make sure the lamp is in the off position before plugging into a wall outlet.
- Do not place near any extreme heat or in direct sunlight.
- Place on an even and secure surface.
- Use only the supplied power adapter.
- Do not use with damaged electrical cords.
- Keep the lamp dry and clean.
- Never overload electrical circuits as it may cause electrical shock or fire.
- For use in indoor dry rooms only. Not suitable for damp rooms.
- Do not look directly into the light source.

### Care and Cleaning:

**DO NOT** use abrasives or chemical cleaners to clean the lamp as it may damage the finish. Use only warm water, then wipe dry with a clean soft cloth.

### LED Array Replacement:

The LED array is rated to last 50,000 hours. Should the LED bulbs cease to function in the warranty period, Conoco Web will replace the LED array free of charge. Conoco Web may at its choice, send a replacement LED array or request for the whole lamp to be shipped to a Conoco Web location or authorized dealer. Shipping and handling charges may be incurred. After the 2 year warranty period, you may purchase a replacement LED array by contacting Conoco Web customer service.

### Troubleshooting and Repair:

Should the lamp stop working properly and/or one of the following problems occur:

- The lamp fails to turn on.
- The lamp flickers.
- The lamp dims to an unusual level.

Turn the lamp off using the toggle switch, recheck all connections and then turn the lamp back on. If the problem persists, discontinue use of lamp and contact Conoco Web customer service.



CONOCO WEB, INC.  
42 Corporate Park, Suite 250  
Irvine, CA 92606  
Phone: 1-888-783-0378  
www.conocoweb.com

**Danger of suffocation**  
Keep children away from packaging

### Limited Warranty Info:

Conoco Web warrants its products to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. Failure of the product under normal operating conditions, may be repaired by Conoco Web or our authorized service dealer free of charge. Some shipping and handling charges may be incurred. During the warranty period, Conoco Web will, at its choice, repair or replace any part or parts which prove to be defective if returned to Conoco Web. Warranty may be void if mishandling, abuse, improper operation, modification, attempted repair or any unauthorized tampering occurs. Damage from natural conditions such as fires, pollution, earthquakes or any other natural or unnatural conditions, accidents, etc. are not covered under this limited warranty.

# LAMP USAGE

**STEP I. TURN THE LAMP SHADE TO THE DESIRED POSITION (FIGURE A AND B).**

 
**STEP II. ADJUST THE HEIGHT OF THE LAMP; HEIGHT CAN BE ADJUSTED BETWEEN 14.5" AND 16.5".**

1. To adjust the height of the lamp -- Loosen the thumbscrew at the back of the lamp (Figure C)
2. Adjust to the desired height (Figure D)
3. Tighten the thumbscrew to secure the lamp height in place.


**STEP III. PLUG THE ADAPTER CONNECTION INTO THE BACK OF THE LAMP BASE (Figure E).**

**STEP IV. PLUG THE POWER ADAPTER INTO A WALL OUTLET.**


**STEP V. LIGHT CONTROLS: THE ON/OFF TOGGLE SWITCH IS PRE-INSTALLED ON THE LAMP SHADE. SIMPLY TOGGLE THE TOGGLE SWITCH TO TURN THE LAMP ON OR OFF.**

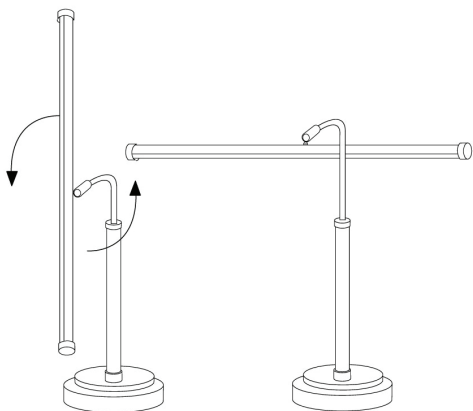


(Figure A and B)

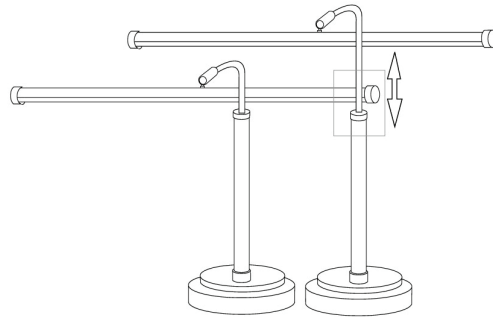 

(Figure D)

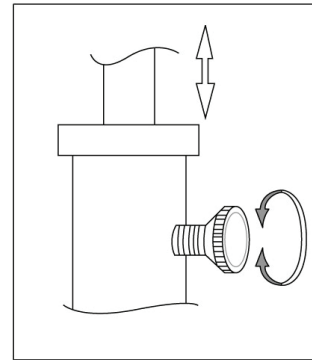 

(Figure C)

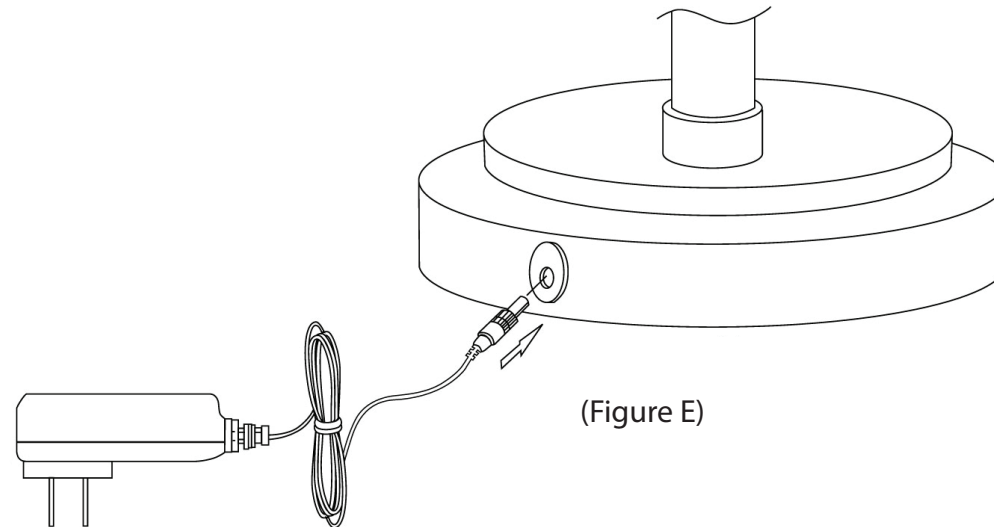 

(Figure E)