


14-inch LED Piano Desk Lamp (DLED14)

USER MANUAL

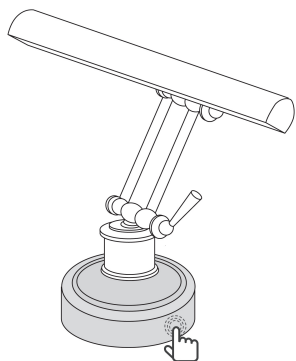

Specifications:

Two-point adjustable height
14" swivelable lamp shade with natural light LED array pre-installed
The lamp shade contains 12 evenly spaced LED nodes
Cycle through three brightness levels
LED lifespan: 50,000 hours
Color Temperature: 2700 K
Power Usage: Less than 10 watts
Electrical cord: 9.5 feet long
UV and infrared-free LED technology
Universal 24v 0.5A DC power adapter

Contents:

- 14-inch LED Piano Desk Lamp
- 24V 0.5A DC Power Adapter

Warning:

Any attempts to repair or modify this lamp in any way which are not expressly approved in writing by Cocoweb will void any warranties.

Before Use:

Before using this lamp for the first time, read these instructions thoroughly and store them in a safe place for future reference.

Important Safety Instructions:

- Do not place near any extreme heat or in direct sunlight.
- Place on an even and secure surface.
- Use only the supplied power adapter.
- Do not use with damaged electrical cords.
- Keep the light dry and clean.
- Never overload electrical circuits as it may cause electrical shock or fire.
- For use in indoor dry rooms only. Not suitable for damp rooms.
- Do not look directly into the light source.

Care and Cleaning:

DO NOT use abrasives or chemical cleaners to clean the light as it may damage the finish. Use only warm water, then wipe dry with a clean soft cloth.

LED Array Replacement:

The LED array is rated to last 50,000 hours. Should the LED bulbs cease to function in the warranty period, Cocoweb will replace the LED array free of charge. Cocoweb may at its choice, send a replacement LED array or request for the whole lamp to be shipped to a Cocoweb location or authorized dealer. Shipping and handling charges may be incurred. After the 2 year warranty period, you may purchase a replacement LED array by contacting Cocoweb customer service.

Troubleshooting and Repair:

Should the lamp stop working properly and/or one of the following problems occur:

- The lamp fails to turn on.
- The lamp flickers.
- The lamp dims to an unusual level.

Turn the lamp off using the toggle switch, recheck all connections and then turn the lamp back on. If the problem persists, discontinue use of lamp and contact Cocoweb customer service.

cocoweb™
www.cocoweb.com

COCOWEB.COM, INC.
42 Corporate Park, Suite 250
Irvine, CA 92606
Phone: 1-888-783-0378



Danger of suffocation
Keep children away from packaging

Limited Warranty Info:

Cocoweb warrants its products to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. Failure of the product under normal operating conditions, may be repaired by Cocoweb or our authorized service dealer free of charge. Some shipping and handling charges may be incurred. During the warranty period, Cocoweb will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb. Warranty may be void if mishandling, abuse, improper operation, modification, attempted repair or any unauthorized tampering occurs. Damage from natural conditions such as fires, pollution, earthquakes or any other natural or unnatural conditions, accidents, etc. are not covered under this limited warranty.

LAMP USAGE

STEP I. INSERT THE ADAPTER CONNECTION INTO THE BACK OF THE LAMP BASE.

STEP II. PLUG THE POWER ADAPTER INTO A WALL OUTLET.

STEP III. ADJUST THE LAMP TO THE DESIRED HEIGHT.

1. To adjust the lamp, release the handles holding the lamp in place (Figure B-1 and B-2).
2. Once desired position is achieved, tighten the handles making sure they are secure.

STEP IV. LIGHTING CONTROLS: TAP THE BASE OF THE LAMP TO CYCLE THROUGH THE THREE BRIGHTNESS LEVELS

1. The lamp starts off at the dimmest light level.
2. To turn the lamp off, cycle through all three brightness levels and then tap once more.

