


SLIM HIGH POWERED LED FLOOR LAMP (FLED-GPS)

INSTALLATION INSTRUCTIONS

Rev. 1 (09/15)

Congratulations on purchasing your new quality lighting fixture from Cocoweb.com. If you have any questions about these instructions or are missing any parts, please call us at 888-783-0378 or email us at customerservice@cocoweb.com.

INCLUDED ITEMS:

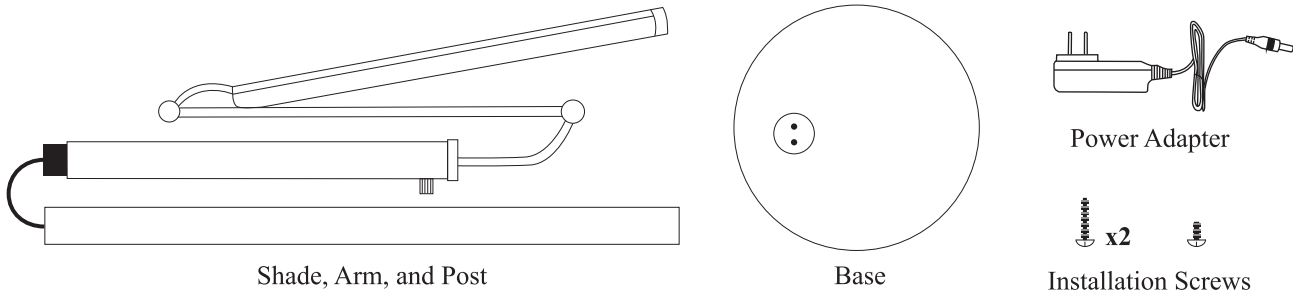

IMPORTANT SAFETY INSTRUCTIONS:

- Do not place near any extreme heat or in direct sunlight.
- Place on an even and secure surface.
- Keep the lamp dry and clean.
- For use in indoor dry rooms only. Not suitable for damp rooms.
- Do not look directly into the light source.

CARE INSTRUCTIONS:

DO NOT use abrasive or chemical cleaners to clean the picture light as it may damage the finish. Use only warm water, then wipe dry with a clean soft cloth.

LED ARRAY REPLACEMENT:

The LED array is rated to last 50,000 hours. Should the LED bulbs cease to function in the warranty period, Cocoweb.com will replace the LED array free of charge. Cocoweb.com may at its choice, send either a replacement LED array directly or request for the whole lamp to be shipped to a Cocoweb.com location or authorized dealer. Shipping and handling charges may be incurred. After the 2 year warranty period, you may purchase a replacement LED array by contacting Cocoweb.com customer service.

TROUBLESHOOTING AND REPAIR:

Should the lamp stop working properly and/or one of the following problems occur: (1) The lamp fails to turn on (2) The lamp flickers (3) The lamp dims to an unusual level, turn the lamp off, then turn the lamp back on. If the problem persists, discontinue use of lamp and contact Cocoweb.com customer service.

COCOWEB LIMITED WARRANTY:

Cocoweb.com warrants its products to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of 2 years from the date of purchase. During the warranty period, Cocoweb.com will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb.com. NOTE: Modification of the picture light in any way will void the warranty.

CAUTION

**Please read this entire manual before installation and use of fixture.
IMPORTANT - Save these instructions for later use.**



Danger of suffocation
Keep children away from packaging

SLIM HIGH POWERED LED FLOOR LAMP (FLED-GPS)

INSTALLATION INSTRUCTIONS

WARNING

Make sure when unplugging the light that it is first turned off. Plugging and unplugging the power adapter to toggle the light ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

STEP 1: UNPACKING THE LIGHT:

1. Remove all plastic wrapping from the light fixture.

LAMP ASSEMBLY:

1. Place Part A inside of Part B.

NOTE: Can only be fitted one way due to placement grooves inside of bars.

2. Attach part A and Part B together using the small placement screw.
3. Insert Part B into Part C, and connect using the provided screws.
4. Plug the adapter in the back of part B, then attach to a wall outlet.
5. Turn the lamp on/off or dim by rotating the dimmer controller on Part A
6. Adjust light direction by loosening joint screws (1 & 2), then retighten when in desired location.

