

22" LED GRAND PIANO LAMP WITH DIMMER (GPLED22)

USER MANUAL

Rev. 1 (01/15)

WARNING

Make sure the light toggle switch is in the OFF position before plugging in the piano lamp to the wall outlet. Use the toggle switch on the lighting fixture or a properly installed wall switch to toggle the piano lamp ON and OFF. Plugging and unplugging the power adapter to toggle the lamp ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

Congratulations on purchasing your new quality lighting fixture from Cocoweb.com, Inc. If you have any questions about these instructions or are missing any parts, please call us at 888-783-0378 or visit our website at www.cocoweb.com.

PACKAGE CONTENTS:

- 22-inch LED Clip-on Grand Piano Lamp
- 24V 0.5A DC Power Adapter
- Mounting Clamp Assembly
- Dimming Controller

IMPORTANT SAFETY INSTRUCTIONS:

- Do not place near any extreme heat or in direct sunlight.
- Place on an even and secure surface.
- Use only the supplied power adapter and dimming controller.
- Do not use with damaged electrical cords.
- Keep the lamp dry and clean.
- Never overload electrical circuits as it may cause electrical shock or fire.
- For use in indoor dry rooms only. Not suitable for damp rooms.
- Do not look directly into the light source.

CARE INSTRUCTIONS:

DO NOT use abrasive or chemical cleaners to clean the piano lamp as it may damage the finish. Use only warm water, then wipe dry with a clean soft cloth.

LED ARRAY REPLACEMENT:

The LED array is rated to last 50,000 hours. Should the LED bulbs cease to function in the warranty period, Cocoweb will replace the LED array free of charge. Cocoweb may at its choice, send a replacement LED array or request for the whole lamp to be shipped to a Cocoweb location or authorized dealer. Shipping and handling charges may be incurred. After the 2 year warranty period, you may purchase a replacement LED array by contacting Cocoweb customer service.

TROUBLESHOOTING AND REPAIR:

Should the lamp stop working properly and/or one of the following problems occur: (1) The lamp fails to turn on (2) The lamp flickers (3) The lamp dims to an unusual level, turn the lamp off using the toggle switch, recheck all connections and then turn the lamp back on. If the problem persists, discontinue use of lamp and contact Cocoweb customer service.

COCOWEB LIMITED WARRANTY:

Cocoweb.com, Inc. warrants its lamps to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. During the warranty period, Cocoweb.com, Inc. will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb.com, Inc.. NOTE: Modification of piano lamp in any way will void the warranty.

SPECIFICATIONS:

- Fits 3/8" - 1 1/2" piano boards
- 22" swivelable shade
- Pre-installed natural light LED array
- Light array contains 12 evenly spaced LED nodes
- Toggle on/off switch located on the lamp shade
- LED lifespan: 50,000 hours
- Color temperature: 2700 K
- Power Usage: Less than 10 watts
- Electrical cord: 9.5 feet long
- UV and Infrared-free LED technology
- Universal 24v 0.5A DC power adapter

 **Danger of suffocation**
Keep children away from packaging

22" LED GRAND PIANO LAMP WITH DIMMER (GPLED22)

USER MANUAL

WARNING

Make sure the light toggle switch is in the OFF position before plugging in the piano lamp to the wall outlet. Use the toggle switch on the lighting fixture or a properly installed wall switch to toggle the piano lamp ON and OFF. Plugging and unplugging the power adapter to toggle the lamp ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

STEP 1: ATTACH MOUNTING CLAMP TO THE LAMP ARM

1. Remove the screw and cover from the mounting clamp
2. Insert the lamp arms into the mounting clamp assembly and replace the cover and screw.

STEP 2: MOUNT THE LAMP ONTO THE PIANO BOARD OR MUSIC STAND

1. Loosen the two thumbscrews.
2. Mount the mounting clamp onto a piano board or music stand


Note You may have to manually adjust the opening of the mounting clamp if you have a thinner/thicker piano board.

3. Tighten the two thumbscrews making sure the lamp is securely fitted to the piano board or music stand.

STEP 3: Plug in the adapter connection into the open port on the dimmer.

STEP 4: Plug in the power adapter from the dimmer into the bottom of the lamp arm

STEP 5: Plug in the power adapter into a wall outlet.

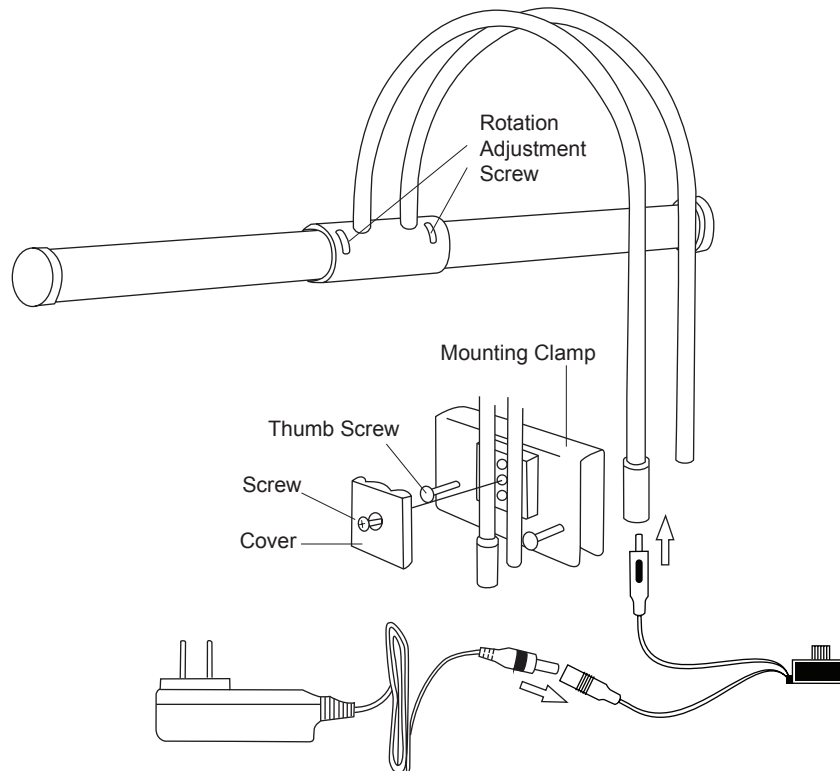

LIGHT CONTROLS

1. The ON/OFF toggle switch is pre-installed on the lamp shade. Simply toggle the toggle switch to turn the lamp on or off.
2. Rotate the dimmer control to increase or decrease light brightness. Rotate counter clockwise until it clicks to turn lamp off.

Note: Piano lamp can be toggled on/off using dimmer or toggle switch. If light is not working, make sure both are in the on position.