

CARE INSTRUCTIONS

Wipe clean with a dry microfiber cloth. DO NOT use abrasive or chemical cleaners as they may damage the finish. Do not submerge or expose to water.

COCOWEB'S LIMITED WARRANTY

Cocoweb warrants its products to be made of first class materials, free from defects of materials or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. During the warranty period, Cocoweb will, at its choice, repair or replace and part(s) which prove to be defective. Any modification of the product will void the warranty.

MORE FROM COCOWEB



Picture Lights



Barn Lights



Track Lights



Piano Lights



Corona, CA

Cocoweb is a dynamic company specializing in innovative lighting and home decor solutions. Renowned for its blend of modern design and advanced technology, Cocoweb offers a range of products including energy-efficient LED lighting, stylish wall art, and unique fixtures that enhance both aesthetics and functionality in residential and commercial spaces. Their commitment to quality and customer satisfaction is evident in their meticulous craftsmanship and attention to detail, ensuring each piece not only illuminates but also adds a touch of elegance to any environment. With a focus on sustainability and cutting-edge design, Cocoweb continues to lead the way in creating lighting solutions that are both beautiful and Eco-friendly.

cocoweb™



22" GRAND PIANO LIGHT

Installation Instructions

www.cocoweb.com

(888) 783-0378


CustomerService@cocoweb.com

SETTING UP THE LIGHT


1. Fold the arms of the light.



2. Attach the clamp to the arms of the light.

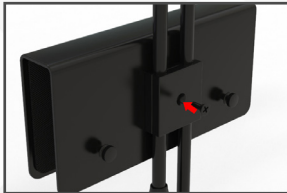

3. Attach the dimmer onto the arm of the light.

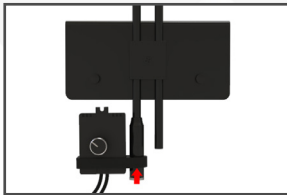

4. Plug in the dimmer into the bottom of light arm.



5. Plug in the power adapter into the dimmer.



ATTACHING THE LIGHT

1. Loosen the two thumb screws on the back of the clamp.
2. Place clamp on the piano music board.
3. Tighten the thumb screws to lock in place.

GENERAL USE

TURNING THE LIGHT ON AND OFF

- Switch the toggle switch on the bottom of the shade. Away from the LED's turns the light on.
- Rotate the Dimmer Clockwise to turn the light on and control the brightness.

ADJUSTING THE BRIGHTNESS

- Rotate the dimmer Clockwise to turn on and increase the brightness of the light
- Rotate the dimmer Counter-Clockwise to decrease the brightness and turn the light off.

DUAL SHADE ROTATION

- Using a Phillips head screwdriver, loosen the two black screws on the back side of the middle connector, allowing you to rotate each light bar.
- Tighten the screws when LED's are in a preferred angle to lock them in place.

HEIGHT ADJUSTMENT

- Loosen the center screw on the back of the clamp to raise or lower the arms to get the LED bar in a preferred location.

BALL JOINT ADJUSTMENT

- The entire shade can swivel forward and backwards, and pivot side to side via the joints at the end of each arm. Some force may need to be applied.

OPTIONAL INSTALLATIONS (SOLD SEPARATELY)

BATTERY PACK INSTALLATION

* The Battery Pack replaces the power adapter in the standard light set up.

- Using the provided cable, plug in the USB to the battery pack.
- Plug in the other end to the dimmer, replacing the plug in adapter.

REMOTE CONTROL INSTALLATION

* The Remote Receiver replaces the dimming controller in the standard light set up.

- Remove Dimmer from the light, and replace with the white receiver box.
- Plug in connector to the bottom of the light Arm.
- Plug in the power source (plug in adapter or battery pack) to the other cable on the receiver.

NEED ADDITIONAL SUPPORT?

CHECK OUT OUR VIDEO MANUAL ONLINE.

