

CLASSIC (ALED) SERIES PICTURE LIGHT

INSTALLATION INSTRUCTIONS

Rev. 5 (06/14)

WARNING

Make sure the picture light toggle switch and dimmer are in the OFF position before plugging in the picture light to the wall outlet. Use the toggle switch on the lighting fixture, the dimmer or a properly installed wall switch to toggle the picture light ON and OFF. Plugging and unplugging the power adapter to toggle the picture light ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

Congratulations on purchasing your new quality lighting fixture from Cocoweb.com, Inc. If you have any questions about these instructions or are missing any parts, please call us at 888-783-0378 or visit our website at www.cocoweb.com.

COCOWEB LIMITED WARRANTY:

Cocoweb.com, Inc. warrants its picture lights to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. During the warranty period, Cocoweb.com, Inc. will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb.com, Inc. NOTE: Modification of picture light will void warranty.

CARE INSTRUCTIONS:

DO NOT use abrasives or chemical cleaners to clean the picture light as it may damage the finish. Use only warm water, then wipe dry with a clean soft cloth.

CAUTION


Please read this entire manual before installation and use of fixture.

IMPORTANT - Observe all local governing codes and ordinances.


IMPORTANT - Save these instructions for later use.

MOUNTING BRACKET ASSEMBLY CONTENTS:

Mounting "T" Bracket

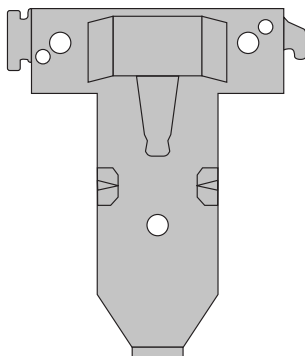

1/2" Screws

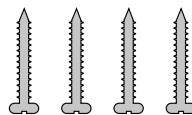


SKU	# of mounting bracket assembly sets
ALED10	one
ALED14	one
ALED24	two
ALED36	three
ALED41	three

CLASSIC (ALED) SERIES PICTURE LIGHT

LIGHTING FIXTURE ASSEMBLY OVERVIEW

WARNING

 Make sure the picture light toggle switch and dimmer are in the OFF position before plugging in the picture light to the wall outlet. Use the toggle switch on the lighting fixture, the dimmer or a properly installed wall switch to toggle the picture light ON and OFF. Plugging and unplugging the power adapter to toggle the picture light ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

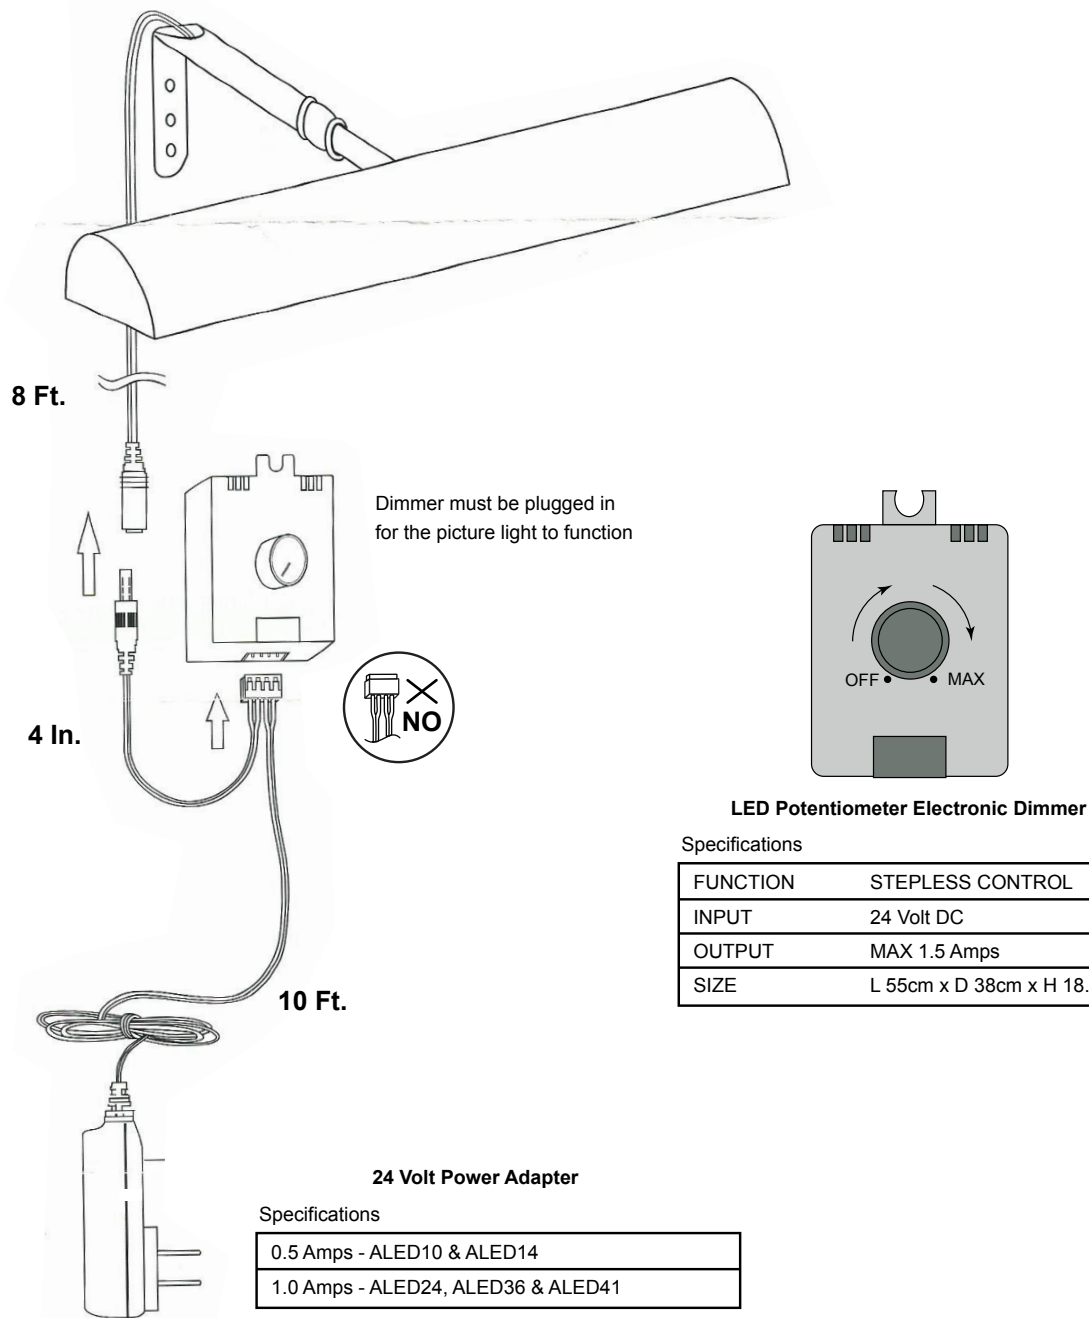

CLASSIC (ALED) SERIES PICTURE LIGHT

INSTALLATION AND WALL MOUNTING INSTRUCTIONS

WARNING

Make sure the picture light toggle switch and dimmer are in the OFF position before plugging in the picture light to the wall outlet. Use the toggle switch on the lighting fixture, the dimmer or a properly installed wall switch to toggle the picture light ON and OFF. Plugging and unplugging the power adapter to toggle the picture light ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

STEP 1: UNPACKING THE LIGHT:

1. Remove all plastic wrapping from the light fixture.

STEP 2: FIXTURE ASSEMBLY INSTRUCTIONS:

1. Loosen Set Screw.
 2. Slide Swivel Tube up the cord and screw into the Swivel located on the rear of the picture light shade.
 3. Slide Bent Arm up the cord onto the Swivel Tube.
 4. Tighten Set Screw.
- For the 24, 36 or 41-inch picture light repeat Step 2 for each extra arm.

STEP 3: INSTALLATION ONTO THE WALL:

A FOR DRYWALL WALLS:

1. On the wall, mark an X where the highest point of the center of the frame will be located (Fig. 1).
- NOTE: The top of the "T" bracket should be aligned horizontally with the top edge of the frame, or in a position where it will remain hidden behind the frame when installed.
2. Measure the distance from the center mark outward and mark the location for the mid-point of the "T" bracket. Refer to CHART A for measurements. NOTE: It is recommended that you take your own measurements for optimum accuracy. Make sure the marks are aligned horizontally and level.
 3. Align the mid-point of the "T" bracket on the X marks and then mark the location of the large top holes (Fig. 2).
 4. If you are drilling into a wood stud, skip to Step 5, as you do not need to install a plastic expansion anchor (not included). If you are NOT drilling into a wood stud, drill holes into the previously marked areas with a drill bit, making sure the plastic expansion anchor (not included) will fit snugly.
 5. Mount onto the wall by screwing two screws into the two top large holes of the "T" bracket. For the 24, 36, or 41-inch picture light repeat Step 5 for each arm.
 6. Insert the Bent Arms of the picture light through the "T" bracket slot (Fig. 4).

NOTE: The "T" bracket opening may be very tight, bending the long arm of the "T" bracket may loosen the opening. DO NOT loosen too much the picture light arm should fit snugly into the opening.

B FOR WOOD WALLS:

1. Follow STEP 1-6 of the drywall installation instructions, skipping Step 4.

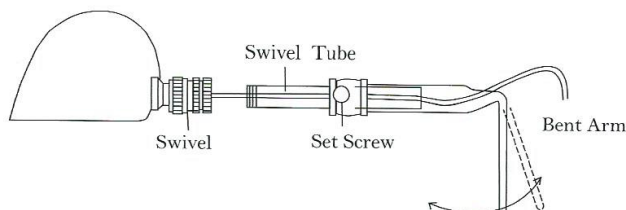 


Fig. 1

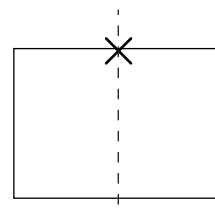 


CHART A

SKU	center to outer
ALED24	6"
ALED36	10"
ALED41	10"

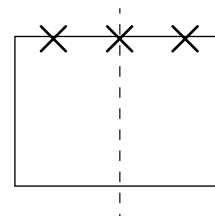 


Fig. 2

Fig. 3


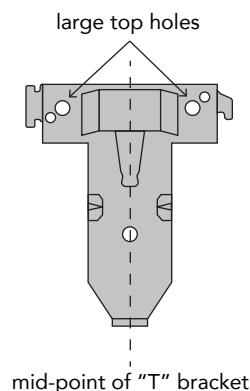 


Fig. 4

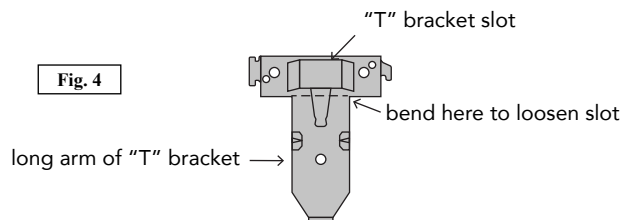 

CLASSIC (ALED) SERIES PICTURE LIGHT

 
INSTALLATION AND FRAME MOUNTING INSTRUCTIONS

WARNING

Make sure the picture light toggle switch and dimmer are in the OFF position before plugging in the picture light to the wall outlet. Use the toggle switch on the lighting fixture, the dimmer or a properly installed wall switch to toggle the picture light ON and OFF. Plugging and unplugging the power adapter to toggle the picture light ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

STEP 1: FIXTURE ASSEMBLY INSTRUCTIONS:

1. Loosen Set Screw.
2. Slide Swivel Tube up the cord and screw into the Swivel located on the rear of the picture light shade.
3. Slide Bent Arm up the cord onto the Swivel Tube.
4. Tighten Set Screw.

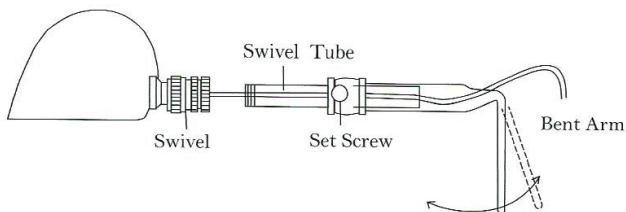

STEP 2: INSTALLATION ON THE FRAME:

A To a Wood Frame

1. Center flat side of "T" bracket on the back of the frame.
2. Align the "T" bracket with the top of the frame
3. Insert two screws into the large holes and screw into frame.
4. Slide bent arm of picture light into "T" bracket and adjust height after picture is installed on the wall.

B To a Metal Frame

1. Fold back tabs 90° using pliers.
2. Partially thread two screws in the smaller holes.
3. Insert "T" bracket onto the middle of the metal frame, left side first.
4. Tighten screws to lock in place.
5. Slide arm of picture light into "T" bracket and adjust height after picture is installed on the wall.

