DIRECT WIRE ATTACHMENT FOR COCOWEB PICTURE LIGHTS (DWP) INSTALLATION INSTRUCTIONS

Rev. 1 (09/16)

Thank you for purchasing your Cocoweb lighting accessory. If you have any questions about these instructions or missing any parts, please call us at 888-783-0378 or email us at customerservice@cocoweb.com.

SPECIFICATIONS:

- Enables Remote Operation
- Allows lamp to connect to a direct wire

IMPORTANT SAFETY INSTRUCTIONS:

- For use only with Cocoweb SLED V-Series only. If you are unsure about your lamp please contact Cocoweb customer service
- Do not place near any extreme heat or in direct sunlight
- For use in indoor dry rooms only. Not suitable for damp locations

CARE INSTRUCTIONS:

Wipe clean with a dry microfiber cloth. **DO NOT** use abrasive or chemical cleaners as they may damage the finish. Do not submerge or expose to water.

TROUBLESHOOTING AND REPAIR:

 
Should the lamp stop working properly, make sure the toggle switch on the shade is pushed away from the LEDs and verify that the LEDs on the remote light up when pushing a button. If the remote LED does not turn on, try replacing the battery inside the remote. If the problem persists, please contact Cocoweb customer service.

COCOWEB LIMITED WARRANTY:

Cocoweb.com warrants its products to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. During the warranty period, Cocoweb.com will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb.com. NOTE: Modification of product in any way will void the warranty.

CAUTION

Please read this entire manual before installation and use of product. IMPORTANT - Save these instructions for later use.





The information in this document is subject to change without notice. COPYRIGHT $\textcircled{\mbox{COPYRIGHT}}$ COCOWEB 2016 COCOWEB.COM 3 Corporate Park, Suite 240 Irvine, CA 92606 Phone: 1-888-783-0378

DIRECT WIRE ATTACHMENT FOR COCOWEB PICTURE LIGHTS (DWP) INSTALLATION INSTRUCTIONS

CAUTION

INSTALLATION SHOULD BE PERFORMED BY AN EXPERIENCED ELECTRICIAN.

Please Verify Electricity is turn off att the breaker and locked before performing installation


STEP 1: ATTACHING THE DIRECT WIRE PACK TO THE LIGHT

- a. Connect the BLUE wire from the accessory to the WHITE (Neutral) wire from the junction box.
- b. Connect the BROWN wire from the accessory to the BLACK (Line) wire from the junction box.
- c. Attach the connector from the accessory to the bottom of the picture light arm.

STEP 2: PAIRING THE REMOTE TO THE RECEIVER

The remote is pre-paired with the receiver. To re-pair the remote, or set up multiple receivers to one remote please follow these steps.

- a. Within 10 seconds of providing power to the direct wire kit, press and hold the "Learn" button for 10 seconds, located in the battery area on the bottom remote.
- b. The light will power off for a few seconds and then flash 3 more times, while the button is held, to notify pairing was successful.
- c. If pairing was not successful, turn off the power to the direct wire kit for 30 seconds and try again from step "a". If the problem persists please contact customer service.

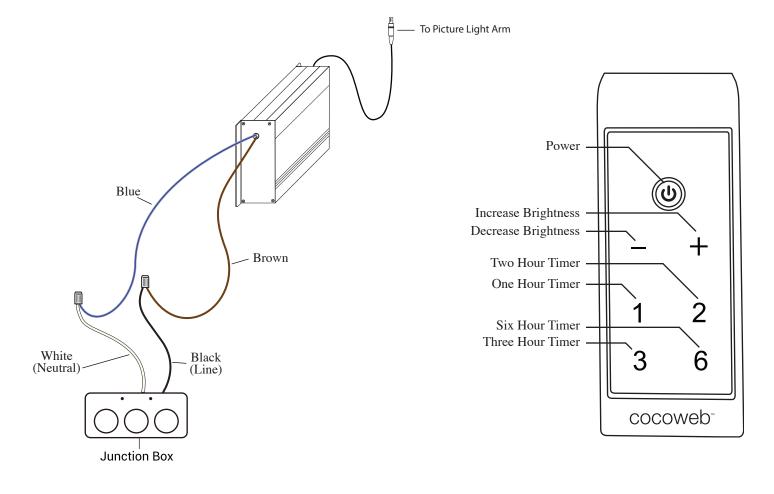



The information in this document is subject to change without notice. COPYRIGHT © COCOWEB.COM 2016 COCOWEB.COM 3 Corporate Park, Suite 240 Irvine, CA 92606 Phone: 1-888-783-0378