

BATTERY PACK ATTACHMENT FOR COCOWEB PICTURE LIGHTS (BP4)

INSTALLATION INSTRUCTIONS

Rev. 1 (04/16)

Thank you for purchasing your Cocoweb lighting battery pack. If you have any questions about these instructions or are missing any parts, please call us at 888-783-0378 or email us at customerservice@cocoweb.com.

SPECIFICATIONS:

- Operates at a range of 50 ft
- Powers the lamp on and off remotely
- Full range lighting dimmer
- 1,2,3, or 6 hour auto-off timer
- Operates on (4) D-cell batteries
- Plug-in installation

IMPORTANT SAFETY INSTRUCTIONS:

- For use only with Cocoweb SLEDV picture lights only. If you are unsure about your lamp please contact Cocoweb customer service
- Do not place near any extreme heat or in direct sunlight
- For use in indoor dry rooms only. Not suitable for damp locations

CARE INSTRUCTIONS:

Wipe clean with a dry microfiber cloth. **DO NOT** use abrasive or chemical cleaners as they may damage the finish. Do not submerge or expose to water.

TROUBLESHOOTING AND REPAIR:

Should the lamp stop working properly, verify that the LEDs on the remote light up when pushing a button. If the LED does not turn on, try replacing the battery inside the remote. If the remote LEDs do light up, try replacing all of the batteries in the battery pack. If the problem persists, please contact Cocoweb customer service for additional support.

COCOWEB LIMITED WARRANTY:

Cocoweb.com warrants its products to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. During the warranty period, Cocoweb.com will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb.com. NOTE: Modification of product in any way will void the warranty.

CAUTION

**Please read this entire manual before installation and use of product.
IMPORTANT - Save these instructions for later use.**



Danger of suffocation
Keep children away from packaging

BATTERY PACK ATTACHMENT FOR COCOWEB PICTURE LIGHTS (BP4)

INSTALLATION INSTRUCTIONS

STEP 1: ATTACHING THE BATTERY PACK TO THE LIGHT

- a. Attach the male connector on the battery pack to the bottom of the picture light arm.
- b. Place (4) D-cell batteries in the battery pack, following the polarity of the image below in Fig-1.

Note: Inserting the batteries incorrectly may cause the batteries to leak, or may damage the light.

OPTIONAL: Plug the adapter in to the side of the battery pack to operate the light without batteries. This option will bypass the batteries and operate the light with the plug-in adapter. Please note that this feature will not recharge the batteries.

STEP 2: PAIRING THE REMOTE TO THE RECEIVER

The remote is pre-paired with the receiver. To re-pair the remote, or set up multiple receivers to one remote please follow these steps.

- a. Follow the instructions in Step 1 above to attach the battery pack to the light.
- b. Within 10 seconds of inserting the last battery, press and hold the “Learn” button, located in the battery area on the remote.
- c. While holding the learn button, the light will power off for a few seconds and then flash 3 more times to notify pairing was successful.
- d. If pairing was not successful, remove the batteries and try again. If the problem persists please contact customer service.

