REMOTE ATTACHMENT FOR COCOWEB PICTURE LIGHTS (RECEIVER) INSTALLATION INSTRUCTIONS

Rev. 1 (04/16)

Thank you for purchasing your Cocoweb lighting remote. If you have any questions about these instructions or are missing any parts, please call us at 888-783-0378 or email us at customerservice@cocoweb.com.

SPECIFICATIONS:

- Operates at a range of 50 ftPowers the lamp on and off
- Full range lighting dimmer
- 1, 2, 3, or 6 hour auto-off timer
- Battery operated (1x 12V battery)
- Plug-in installation

IMPORTANT SAFETY INSTRUCTIONS:

- For use only with Cocoweb SLEDV picture lights. If you are unsure about your lamp please contact Cocoweb customer service.
- Do not place near any extreme heat or in direct sunlight.
- For use in indoor dry rooms only. Not suitable for damp locations.

CARE INSTRUCTIONS:

Wipe clean with a dry microfiber cloth. **DO NOT** use abrasive or chemical cleaners as they may damage the finish. Do not submerge or expose to water.

TROUBLESHOOTING AND REPAIR:

Should the remote stop working properly, verify that the LEDs on the remote lights up when pushing a button. If the LEDs do not turn on, try replacing the battery inside the remote. If the problem persists contact Cocoweb customer service for additional support.

COCOWEB LIMITED WARRANTY:

Cocoweb.com warrants its products to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. During the warranty period, Cocoweb.com will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb.com. NOTE: Modification of product in any way will void the warranty.



Please read this entire manual before installation and use of product. IMPORTANT - Save these instructions for later use.





REMOTE ATTACHMENT FOR COCOWEB PICTURE LIGHTS (RECEIVER) INSTALLATION INSTRUCTIONS


STEP 1: ATTACHING THE RECEIVER TO THE LIGHT


- a. Attach the male connector on the receiver to the bottom of the picture light arm.
- b. Attach the female connector on the receiver to the connector on the adapter cord.

STEP 2: PAIRING THE REMOTE TO THE RECEIVER

The remote is pre-paired with the receiver. To re-pair the remote, or setup multiple receivers to one remote please follow these steps.

- a. Follow the instructions in Step 1 above to attach the receiver to the light.
- b. Within 10 seconds of plugging the adapter into the receiver, press and hold the "Learn" button, located in the battery area on the remote.
- c. While holding the learn button, the light will power off for a few seconds, and then flash 3 more times to notify pairing was successful.
- d. If pairing was not successful, unplug the receiver and try again. If problem persist, please contact customer service.

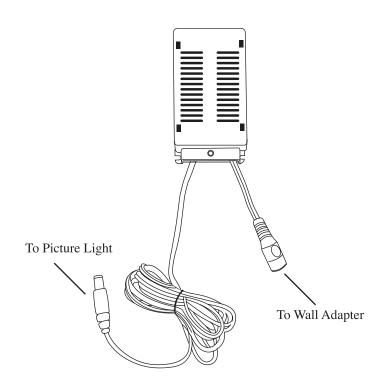

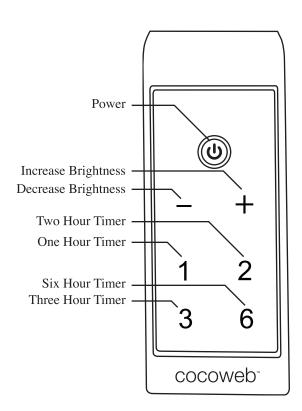



COCOWEB.COM 3 Corporate Park, Suite 240 Irvine, CA 92606 Phone: 1-888-783-0378