

TRU-SLIM (SLED) SERIES PICTURE LIGHT

INSTALLATION INSTRUCTIONS

Rev. 4 (02/15)

WARNING

Make sure the picture light toggle switch and dimmer are in the OFF position before plugging in the picture light to the wall outlet. Use the toggle switch on the lighting fixture, the dimmer or a properly installed wall switch to toggle the picture light ON and OFF. Plugging and unplugging the power adapter to toggle the picture light ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

Congratulations on purchasing your new quality lighting fixture from Cocoweb.com, Inc. If you have any questions about these instructions or are missing any parts, please call us at 888-783-0378 or visit our website at www.cocoweb.com.

COCOWEB LIMITED WARRANTY:

Cocoweb.com, Inc. warrants its picture lights to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. During the warranty period, Cocoweb.com, Inc. will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb.com, Inc.. NOTE: Modification of picture light in any way will void the warranty.

CARE INSTRUCTIONS:

DO NOT use abrasives or chemical cleaners to clean the picture light as it may damage the finish. Use only warm water, then wipe dry with a clean soft cloth.


CAUTION

Please read this entire manual before installation and use of fixture.


IMPORTANT - Observe all local governing codes and ordinances.

IMPORTANT - Save these instructions for later use.


MOUNTING BRACKET ASSEMBLY CONTENTS:

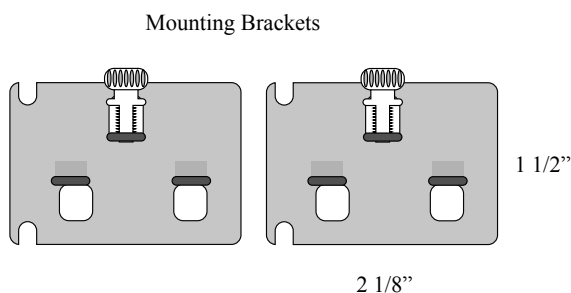


Plastic Expansion Anchors

 

1" Screws

 


Channel Brackets

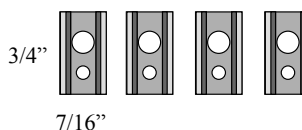

3/8" Screws



 1/2" Screws




TRU-SLIM (SLED) SERIES PICTURE LIGHT

LIGHTING FIXTURE ASSEMBLY OVERVIEW

WARNING


Make sure the picture light toggle switch and dimmer are in the OFF position before plugging in the picture light to the wall outlet. Use the toggle switch on the lighting fixture, the dimmer or a properly installed wall switch to toggle the picture light ON and OFF. Plugging and unplugging the power adapter to toggle the picture light ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

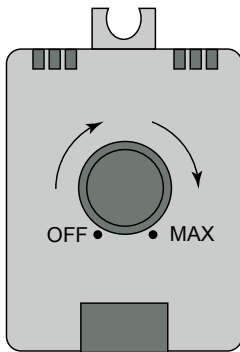

LED Potentiometer Electronic Dimmer

Specifications

FUNCTION	STEPLESS CONTROL
INPUT	24 Volt DC
OUTPUT	MAX 1.5 Amps
SIZE	L 1.5 in x D 0.75 in x H 2 in

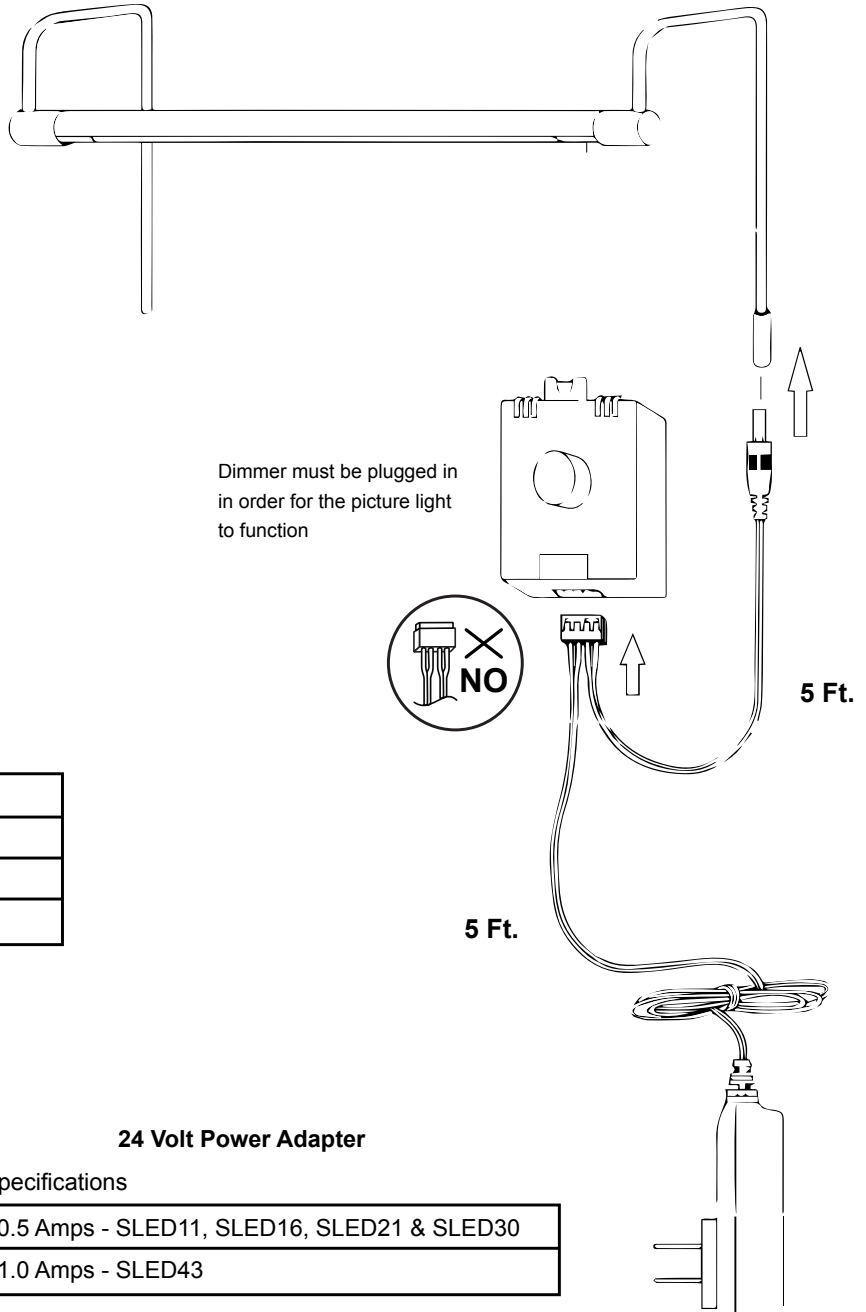

24 Volt Power Adapter

Specifications

0.5 Amps - SLED11, SLED16, SLED21 & SLED30
1.0 Amps - SLED43

TRU-SLIM (SLED) SERIES PICTURE LIGHT


INSTALLATION AND WALL MOUNTING INSTRUCTIONS

WARNING

Make sure the picture light toggle switch and dimmer are in the OFF position before plugging in the picture light to the wall outlet. Use the toggle switch on the lighting fixture, the dimmer or a properly installed wall switch to toggle the picture light ON and OFF. Plugging and unplugging the power adapter to toggle the picture light ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

STEP 1: UNPACKING THE LIGHT:

1. Remove all plastic wrapping from the light fixture.
2. Rotate arms so they are perpendicular to the shade tube (Fig. 1)

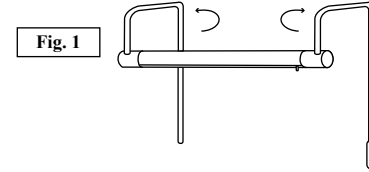

STEP 2: INSTALLATION ON THE WALL:

A. FOR DRYWALL WALLS:

1. On the wall, mark an X where the center of the frame will be located.
2. On the wall, mark a small line where the top of the frame will be.
NOTE: The top of the mounting bracket should be aligned horizontally 1" below the edge of the frame, or in a position where they will remain hidden behind the frame when installed.
4. Measure the distance from the center mark outward and mark the location for the mounting bracket "outer screws." (Fig. 2) Refer to CHART A for measurements. NOTE: It is recommended that you do your own measurements for best accuracy.
5. Using the mounting bracket as a guide, mark the "inner screw" position for both sides, making sure that the mounting bracket holes are aligned and in a level position.
6. If you are drilling into a wood stud, skip to STEP 8, as you do not need to install a plastic expansion anchor. If you are NOT drilling into a wood stud, drill four holes in the previously marked areas with a 1/4" drill bit, making sure the plastic expansion anchor will be able to fit snugly.
NOTE: do not drill the hole too big, this will cause the plastic expansion anchor to fall through the hole when screwing in screws.
7. Gently tap the plastic expansion anchors with a hammer or rubber mallet into each of the holes, making sure they are flush against the wall.
8. Mount brackets, with the thumbscrew located on the right side, by screwing a 1" screw through the mounting bracket openings into the plastic expansion anchors. If installing on a wood stud, screw the 1" screws through the mounting bracket opening directly into the wall. (Fig. 3)

CHART A

SKU	center to outer
SLED11	6 1/2"
SLED16	8 3/8"
SLED21	10 7/8"
SLED30	15 1/8"
SLED43	21 7/8"

Fig. 2


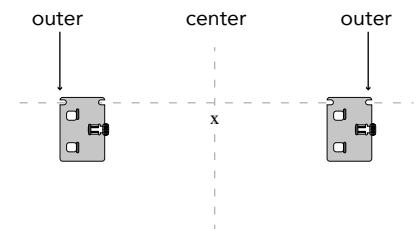


Fig. 3

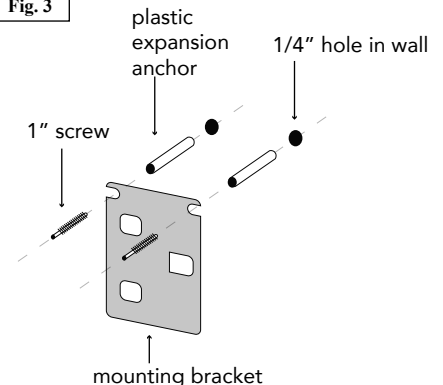

B. FOR WOOD WALLS:

1. Follow STEP 1-5 of drywall installation instructions.
2. Skip to STEP 8, and use 3/8" screws instead of 1" screws.
NOTE: You do not have to use plastic expansion anchors for wood walls.


STEP 3: FIXTURE INSTALLATION INSTRUCTIONS:

1. Unscrew the thumb screws to insert the light fixture arms into the mounting brackets.
2. Slide the arms up or down to attain the desired shade location in relation to the frame. You will most likely want the shade parallel to or a little below the top of the frame. You can usually position it by "eyeballing" the shade tube in relation to the top of the frame. Adjust and tighten the thumb screws into position.
3. You may adjust the light spread on the artwork by loosening the rotation adjustment screws and rotating the shade (Fig. 4)
TO AVOID DISCOMFORT, PROTECT YOUR HAND WITH A GLOVE OR PIECE OF CLOTH IF YOU ROTATE THE TUBE WHILE THE PICTURE LIGHT IS TURNED ON.
4. Install the two plastic "bumpers" on the two bottom corners of the frame. This will protect your wall from scratching. (Fig. 5)

Fig. 4



 Fig. 5



TRU-SLIM (SLED) SERIES PICTURE LIGHT

INSTALLATION AND FRAME MOUNTING INSTRUCTIONS

WARNING

Make sure the picture light toggle switch and dimmer are in the OFF position before plugging in the picture light to the wall outlet. Use the toggle switch on the lighting fixture, the dimmer or a properly installed wall switch to toggle the picture light ON and OFF. Plugging and unplugging the power adapter to toggle the picture light ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

 
STEP 1: UNPACKING THE LIGHT:

1. Remove all plastic wrapping from the light fixture.
2. Rotate the arms so they are perpendicular to the shade tube (Fig. 1)

STEP 2: INSTALLATION ON THE FRAME:

1. Place frame upside down on a table with the top toward you and positioned at the edge of the table (Fig. 2)
2. Mark the center of the frame with a pencil or magic marker.
3. Next, mark the location for the mounting bracket "outer" screws. See Chart at right for lamp length and distance needed from outside screw position to center of frame, then refer to (Fig. 3)
4. For wood frame installation or on wood walls, attach the mounting brackets using the small 3/8" screws.
5. For metal frame installation, install the mounting brackets using the channel brackets provided:


- a. Start screw in channel bracket.
- b. Insert channel bracket into frame channel. (Fig. 4)



- c. Slide screw in channel bracket into slot in mounting bracket slot. (Fig. 5)
- d. Locate bracket according to #3 above.
- e. Tighten screw.
- f. Install another channel bracket on the other side of the mounting bracket. (Fig. 6)

STEP 3: FIXTURE INSTALLATION INSTRUCTIONS:

1. Snap the arms into the attachment brackets. This will take a bit of force, but will not damage the arms.
2. Slide the arms up or down to attain the desired shade location in relation to the frame. You most likely will want the shade parallel to or a little below the top of the frame. You can usually position it by "eyeballing" the shade tube in relation to the top of the frame while it is still lying upside down on the table (Fig. 7). It is easy to adjust and tighten the thumb screws in the position.
3. You may adjust the light spread on the artwork by loosening the rotation adjustment screws and rotating the shade (Fig. 8) TO AVOID DISCOMFORT, PROTECT YOUR HAND WITH A GLOVE OR PIECE OF CLOTH IF YOU ROTATE THE TUBE WHILE THE PICTURE LIGHT IS TURNED ON.
4. Install the two plastic "bumpers" on the two bottom corners of the frame. This will protect your wall from scratching. (Fig. 9)

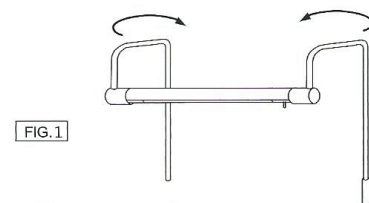

Light Length	Outer to Center
SL11	6 1/2"
SL16	8 3/8"
SL21	10 7/8"
SL30	15 1/8"
SL43	21 7/8"

