COCOWEB INTERCHANGEABLE BARN LIGHT SWIVEL JOINT INSTALLATION INSTRUCTIONS

WARNING

Installation of lights and electrical work may present a possible shock or fire hazard if improperly installed or used. All electrical work should be performed in accordance with all federal, state and local safety regulations and require proper grounding. All work should be performed by a certified electrician. Before starting installation, turn OFF electricity at the main fuse or circuit breaker that controls the power to the fixture/room you are working on.

Note Swivel joint purchase does not include gooseneck arm or shade.

STEP 1: UNPACKING THE SWIVEL:

a. Carefully remove the swivel joint from the packaging and separate the two halves of the swivel and the adjustment knob.

STEP 2: ATTACHING THE SWIVEL:

- b. Squeeze exactly equal amounts of resin and hardener onto a clean surface and mix thoroughly. Apply mixture to where the cord meets the shade to prevent water leaking into the bulb. Allow five minutes to solidify.
- c. Secure the bottom half of the swivel (the male end) to the shade.
- d. Feed the wire through the top half of the swivel (the female end).
- e. Insert the arm in the top half of the swivel joint and tighten.
- f. Insert and tighten the set screw to join the arm and swivel together.
- g. Hold the two halves of the joint together at your desired angle and screw in the adjustment knob to secure the joint into position.

STEP 3: ADJUSTING THE SWIVEL:

- h. Turn adjustment knob counter-clockwise to loosen the joint. Angle the shade to desired position.
- i. Turn adjustment knob clockwise to tighten the joint and lock the shade into position.
- j. Ensure the knob is tightened completely and the teeth of the joint are joined together.

Note Gooseneck installation is rated for indoor or outdoor use. For optimal weatherproofing, use Teflon tape on the arm and swivel joint threads. In high-wind locations, tightening the adjustment knob with pliers or using thread adhesive is recommended.





