

C-LOCK 5/8" HEAVY DUTY RECEIVER HITCH LOCK

INSTALLATION INSTRUCTIONS

Rev. 1 (09/15)

Congratulations on purchasing your new quality hitch lock from Cocoweb.com. If you have any questions about these instructions or are missing any parts, please give us a call at 888-783-0378 or visit our website at www.cocoweb.com.

SPECIFICATIONS:

- Industry Standard 5/8" Pin
- Quality Durable Steel
- Fits Most Standard Hitches
- Rubber Weather Guard
- Includes 2 Uniquely Cut Keys
- 1 Year Manufacturer Warranty

PACKAGE CONTENTS:

- Black 5/8" Hitch Lock
- 2 Pre-Cut Keys

IMPORTANT SAFETY INSTRUCTIONS:

Use product only with correct size and style of hitch.

NOTE: Diameter of pin is 5/8 inch and can fit a hitch of 2.8125 inches wide.

CARE INSTRUCTIONS:


If locking mechanism is exposed to water, wipe dry and air dry for up to 48 hours to prevent interior rusting. Apply synthetic lubricant into key hole twice a year.

STEP 1: UNPACKING THE LOCK:

1. Remove all plastic wrapping.

STEP 2: INSTALLATION:

1. Insert towing item into hitch
2. Remove locking mechanism on the C-Lock.
3. Place long end of C-Lock through both holes on hitch mount and mounted item.
4. Replace locking mechanism.
5. Securely snap rubber cap over lock.
6. Verify that the C-Lock is securely locked and held in place.

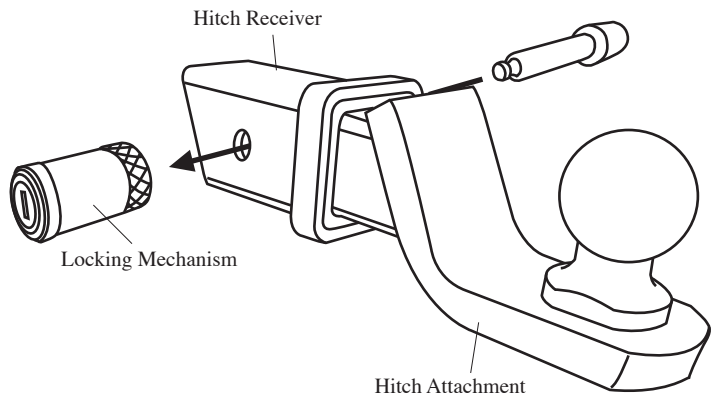

COCOWEB LIMITED WARRANTY:

Cocoweb.com warrants its products to be made of first class materials, free from defects of material and workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of one (1) year from the date of purchase. During the warranty period, Cocoweb.com will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb.com. NOTE: Modification of product in any way will void the warranty.

CAUTION

IMPORTANT - Save these instructions for later use.



Danger of suffocation

Keep children away from packaging